
MOBILIFT PORTABLE WHEELCHAIR LIFT - an effective solution where wheelchair access is difficult.

Problem:

There are many situations in civic buildings, colleges, schools, churches and historic buildings, where wheelchair access is difficult, such as a stage in an auditorium, steps in listed buildings etc.

Solution:


The **Mobilift Portable Wheelchair Lift** can be wheeled into position, manually elevated, then lowered and wheeled away when not in use.

Loading...




Loading

- ✗ The Mobilift loads from a ground ramp which folds down to the floor.
- ✗ The lift's platform is large enough to accommodate electric wheelchairs or scooters.
- ✗ No special training or expertise is required to operate the Mobilift.
- ✗ Simple diagrams on the control panel clearly depict the lift's operating instructions.
- ✗ Self sufficient – no power is required.

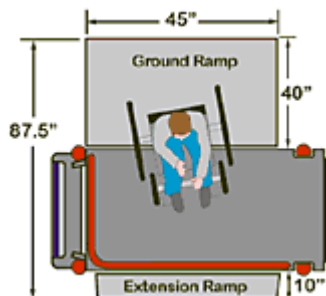

Lifting


- ✗ Typical elevation time is 20 seconds to maximum height.
- ✗ 5lbs (2.27kg) of crank force is required to lift 150lbs (68kg) and 11lbs (5kg) of crank force is required to lift 300lbs (136kg)
- ✗ Capacity is 600lbs (273kg); all lifts are factory tested to 3000lbs (1364kg)

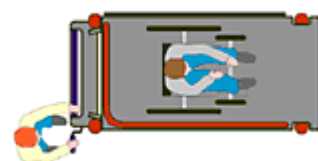



Leaving

- ⌘ The Mobilift unloads using a bridge ramp.
- ⌘ Bridge ramps are available in differing lengths to clear stairs or other obstacles - standard length is 20" (0.51m).

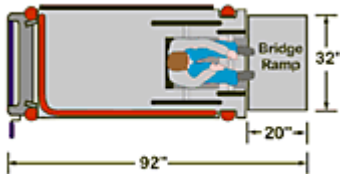

Moving and Storage

- ⌘ The Mobilift moves and stores easily and quickly.
- ⌘ 4lbs (1.8kg) of force on level ground is all that is required to start a Mobilift moving - as easy as moving a shopping cart.
- ⌘ Rolls well over uneven surfaces for outdoor stage access or movement between departments.
- ⌘ Weigh approx. 268lbs (122kg) and can be transported in the back of a pickup truck.
- ⌘ Locking cable included to prevent unauthorized use.

Dimensions

- ⌘ Maximum lifting height: 60" (1.52m)
- ⌘ Capacity: 600 lbs. (275 kg)
- ⌘ Lift weight: 268 lbs. (122 kg)
- ⌘ Lift height: 66" (1.67m)
- ⌘ Lift width: 37.5" (0.95m)
- ⌘ Length: 72" (1.83m)
- ⌘ Platform size: 34" X 56" (0.86m X 1.42m)
Accommodates a large wheelchair or scooter.
- ⌘ Bridge ramp size: 20" L X 32" W (0.51m X 0.81m)
Note: Other ramps sizes are available as an option.

*Standard model is supplied with 20" (0.51m) bridge ramp and finished in grey and natural aluminium.

Customisable:

- ⌘ Bridge ramps of varying lengths are available to reach over stairs and other obstacles.
- ⌘ Opposite side cranking and loading for unique applications.
- ⌘ 180 other colours are available as an option.



Security & Communications

Unit 1, The Close, Yew Tree Lane, Bradley, Derbyshire. DE6 1PG. United Kingdom

Tel: 0870 7449968

Fax: 0870 7449969

www.induction-loops.co.uk

email: sales@ktpuk.com